



Diamond Hearths

HEARTH PAD INSTALLATION MANUAL
TYPE 1 HEARTH PAD - RADIANT LINE
TEST REPORT #0408MM002S

- THE USAGE OF THIS HEARTH PAD IS FOR EMBER PROTECTION ONLY. R-VALUE = 0. FOR USE WITH APPLIANCES THAT REQUIRE ONLY EMBER PROTECTION. THIS PRODUCT IS NOT TO BE USED WITH APPLIANCES THAT SPECIFY TYPE 2 THERMAL FLOOR PROTECTION OR A SPECIFIC R-VALUE REQUIREMENT.
- INSTALL HEARTH PAD AS PER STOVE INSTALLATION INSTRUCTIONS. **DO NOT DROP HEARTH PAD, TILE/SLATE/STONE CONTACT WITH PAD CAN BE COMPROMISED.**
- THIS PAD MUST BE IN COMPLIANCE WITH SIZING AND UL 1618 TYPE 1 & 2 THERMAL CONDUCTIVITY REQUIREMENTS. ALL STOVES BEING PLACED ON THE HEARTH PADS MUST BE CERTIFIED TO THE APPROPRIATE STANDARDS: NFPA-211, ULC-5632-99, UL-1482, AND UL-737.
- THE FLOOR PROTECTOR MUST BE INSTALLED IN ACCORDANCE WITH LOCAL BUILDING CODES.
- HEARTH PADS MUST BE INSTALLED ON A FLAT, CONTINUOUS SURFACE.
- WHEN SECURING TWO OR MORE FLOOR PROTECTORS TOGETHER, ENSURE THAT THERE IS CONTINUOUS PROTECTION FOR THE COMBUSTIBLE MATERIAL UNDER THE JOINT WITH NO GAPS BETWEEN THE JOINED EDGES.
- INSTALLER OR OWNER CANNOT AT ANY TIME DISRUPT THE INTEGRITY OF THE HEARTH PAD SURFACE (CANNOT BE CUT, DRILLED INTO, ETC).
- TO MAINTAIN WARRANTY: NEVER SPLIT OR DROP WOOD /TOOLS ON HEARTH PAD SURFACE. IN DOING SO COULD CHIP, CRACK, OR LOOSEN THE SURFACE.
- TO INSTALL PAD AND PEDESTAL, PLACE PEDESTAL ON FLOOR AND LAY HEARTH BOARD ON TOP. THERE IS NOTHING TO BE USED TO ATTACH THE PAD TO THE PEDESTAL. THE STOVE INSTALLATION WILL INSURE SECURE PLACEMENT.
- THIS FLOOR PROTECTOR MAY (OR MAY NOT, AS APPROPRIATE) BE INSTALLED ON A CARPETED SURFACE.

